



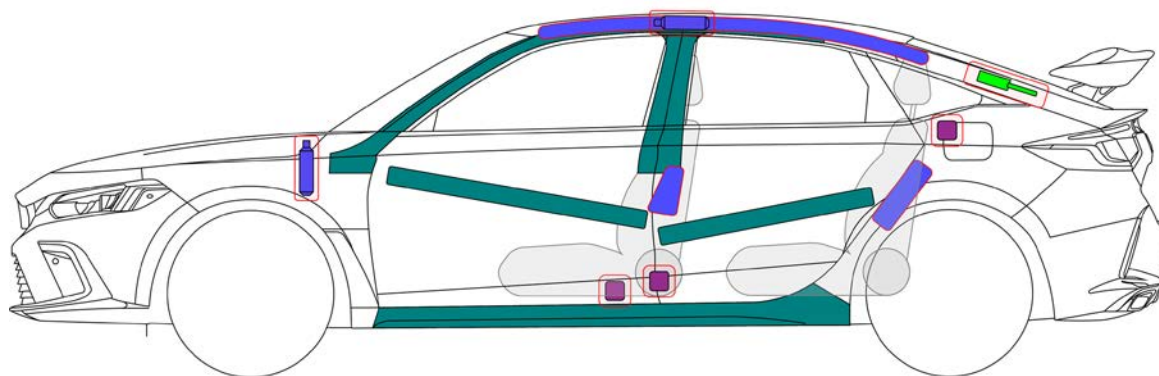

**Honda Civic Type R
5dr Hatchback
(2022 -)**

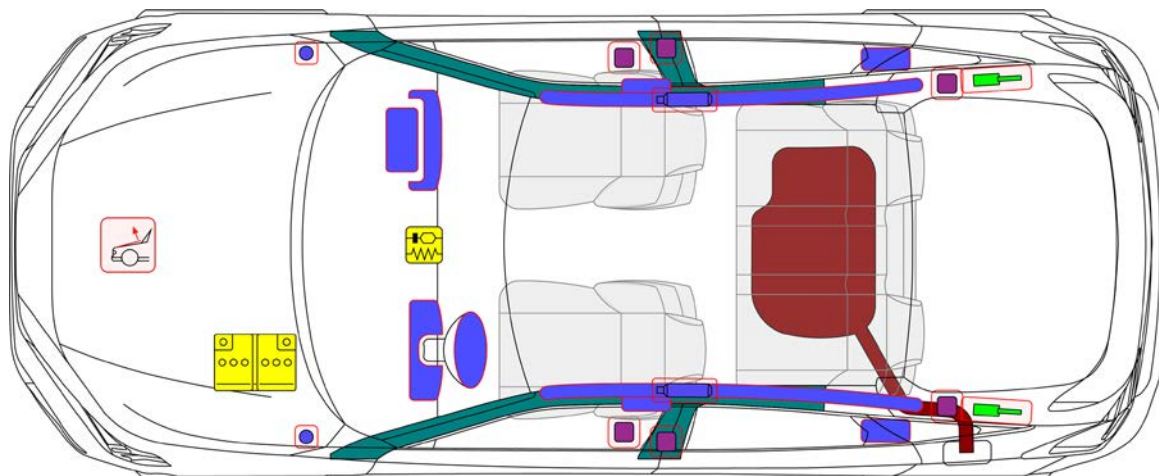

Airbag	Stored gas inflator	Seat belt pretensioner	Gas strut/preloaded spring	SRS controlunit
Battery low voltage	High strength zone	Fuel tank content gasoline/ethanol	Pedestrian protection active system	

Honda Civic Type R Type: 5dr Hatchback (2022 -) – Additional Pages

1. Identification / recognition

Model name



Type



Fuel cap



2. Immobilization / stabilization / lifting


Immobilize vehicle:

1. Block wheels and select (N) Neutral position with the gear lever
2. Set parking brake by pulling the parking brake switch (P)



Lifting points:

 Appropriate lifting points

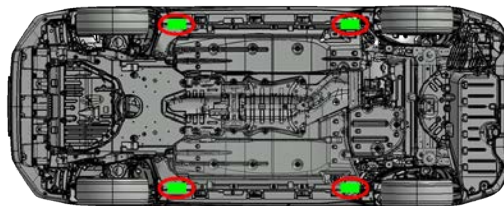


3. Disable direct hazards / Safety regulations



1. Press the Start/Stop button to shut off the engine



Then, remove the electronic key and keep at least 16 ft. (5 m) away from the vehicle

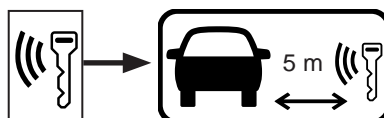

2. Disconnect 12 Volt battery

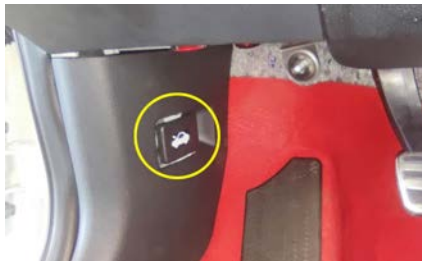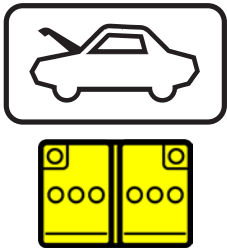

4. Access to the occupants

Seat adjustment



Steering column adjustment












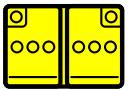

Glass types

- A. Laminated glass
- B. Tempered glass



5. Stored energy / Liquids / Gases / Solids

	12V	 
	R-1234yf 435-485 g	   
	47L	 

8. Towing / transportation / storage


Recovery hook storage



Location rear hook



Towing

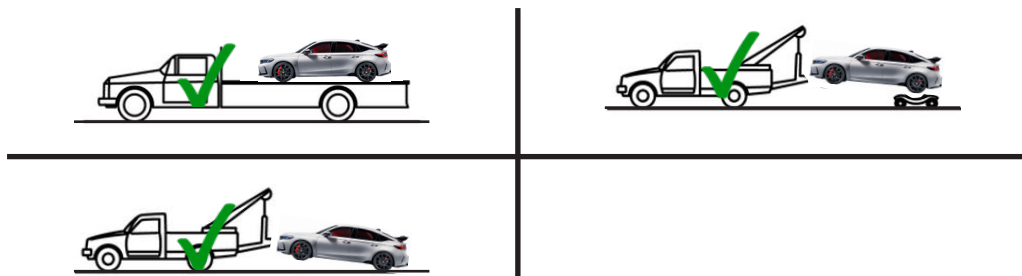

10. Explanation of pictograms used

	Remove smart key		Flammable
	Caution		Hazardous to the human health
	Warning; low temperature		Explosive
	Air-conditioning component		Corrosives
	Vehicle on fuel of liquid group 1		Bonnet