








Assembly instructions:

(RHD)

Connection point location:

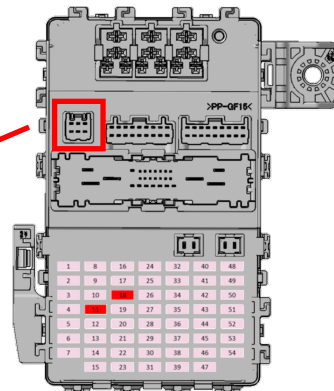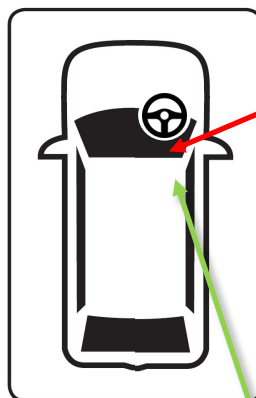

Viewpoint



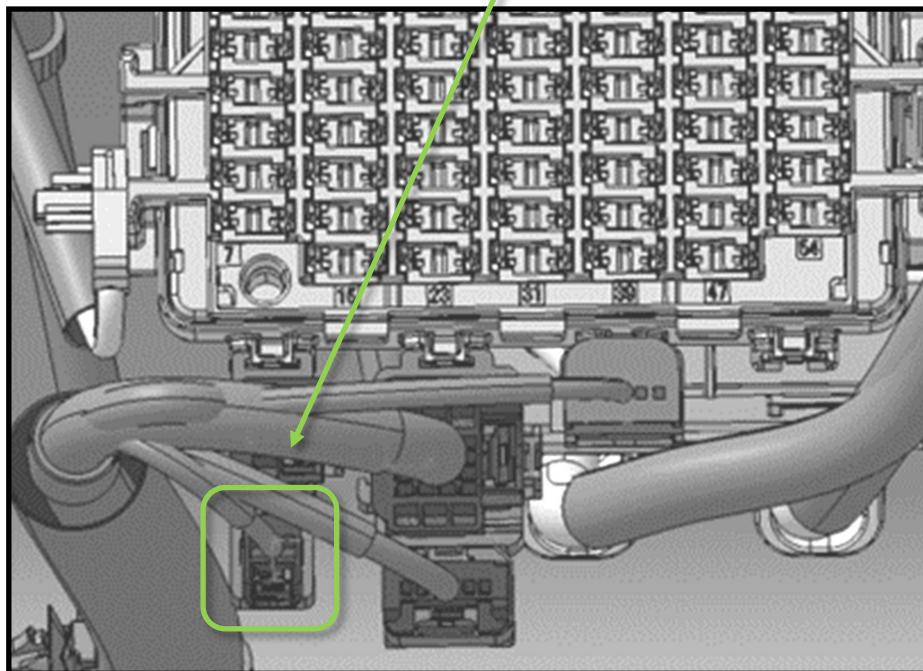




Assembly instructions:


(LHD)

Connection point location:

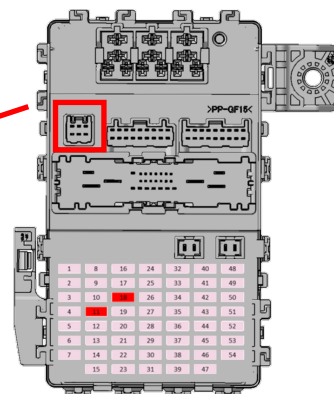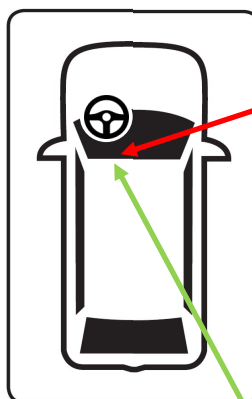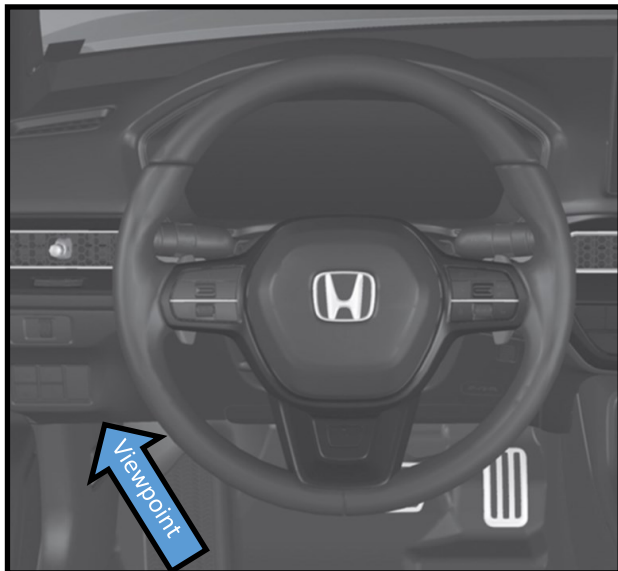

2 pin wire to wire connector

Viewpoint

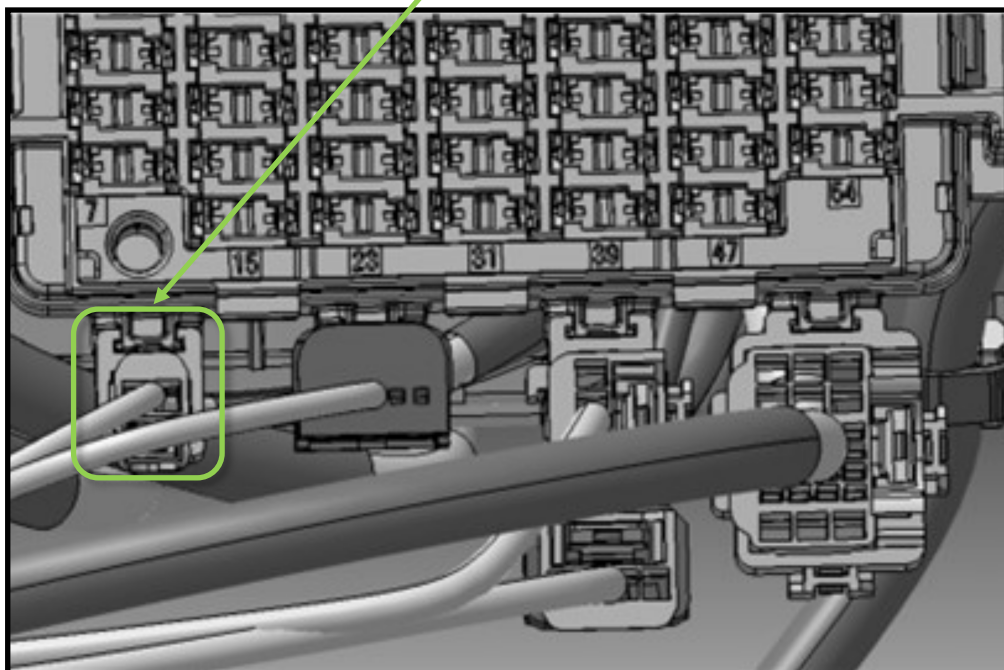



Connection point:

2 pin wire to wire connector.


Disconnect the connector and make the connections between the male and female connectors with compatible connectors and terminals made by YAZAKI.

6 pin fuse box connection


Connect using a female 6 pin connector and terminals made by YAZAKI

Connector type: YAZAKI


7186-8845 (2 pin male)

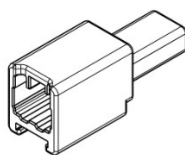

7187-8845 (2 pin female)

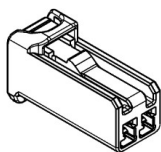

7187-8846 (6 pin female)

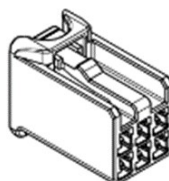


Male Terminals*

7114-7386-02 (S)

7114-7387-02 (M)

7114-7388-02 (L)

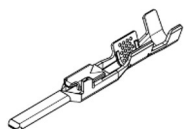


Female Terminals*

7116-7389-02 (S)

7116-7390-02 (M)



7116-7391-02 (L)

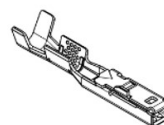

*Different sizes by wire gauge

Panel removal:

LHD shown, RHD is a mirror image.

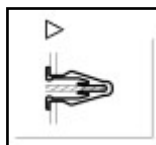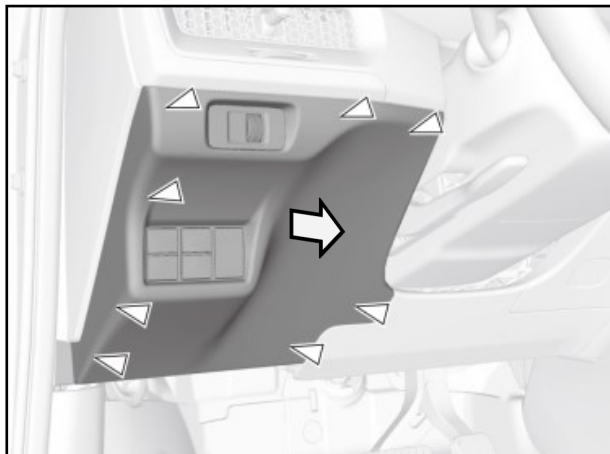

Modification of vehicle operation:

None applicable.

Mounting position of alcohol interlock handset and alcohol interlock control unit:

Recommended installation position:

Install in a position that does not interfere with driving operations or visibility.

Positions where it should not be installed:

Do not install in the airbag deployment area.