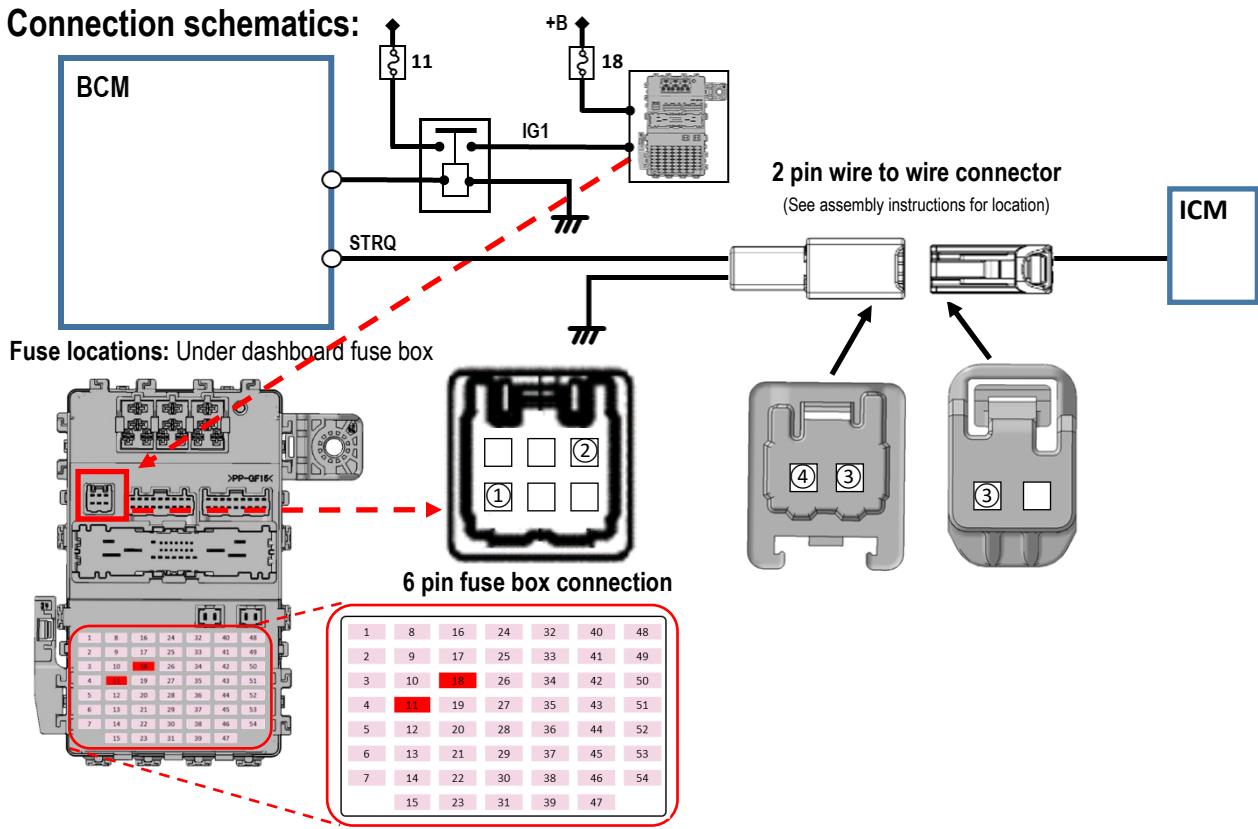





**Installation document for alcohol interlocks****Connection schematics:**

	Function	Position of connection
①	Battery supply (+B), non blocking (Fuse 18 - limit 20A)	Pin 6 of 6 pin fuse box connection (Male)
②	Ignition power (IG1) (Vehicle ready) (Fuse 11 - limit 10A)	Pin 1 of 6 pin fuse box connection (Male)
③	Engine operation (Start signal) (STRQ) Prohibits the vehicle from starting if circuit is open.	Pin 1 of 2 pin connector (Male) Pin 1 of 2 pin connector (Female)
④	Ground	Pin 2 of 2 pin connector (Male)

Safety risks at installation and items to be considered


When installing on vehicles equipped with airbags, please make sure to never install any devices or wiring in a place that could interfere with the airbag cover parts or airbag operation.
In the event of an emergency, it may have a serious impact on passengers.

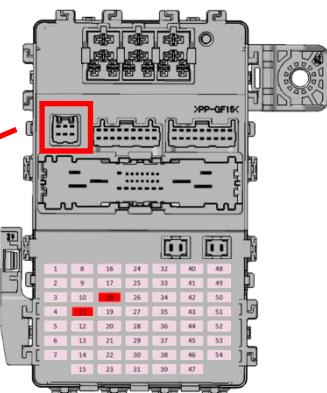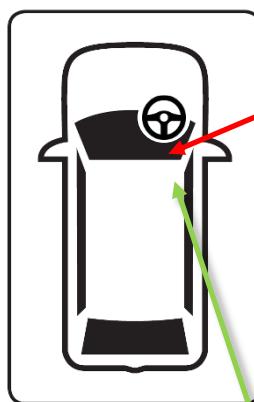
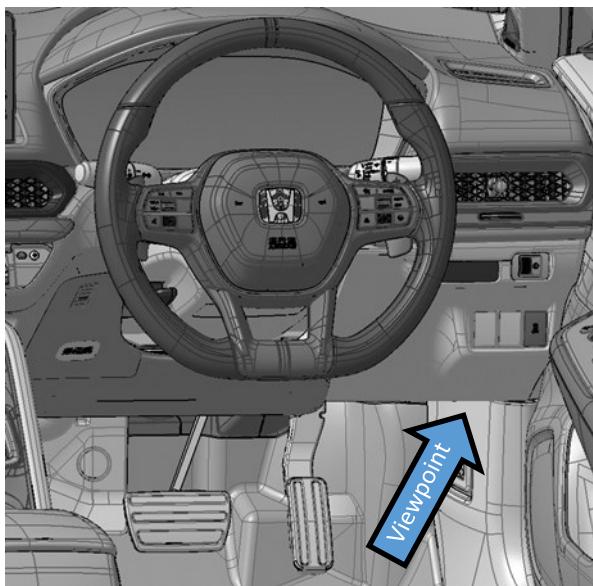
When installing the alcohol interlock device on the dashboard, install it so that it does not interfere with the drivers view or controls of the vehicle.

**Assembly instructions:****(RHD)****Connection point location:**

2 pin wire to wire connector

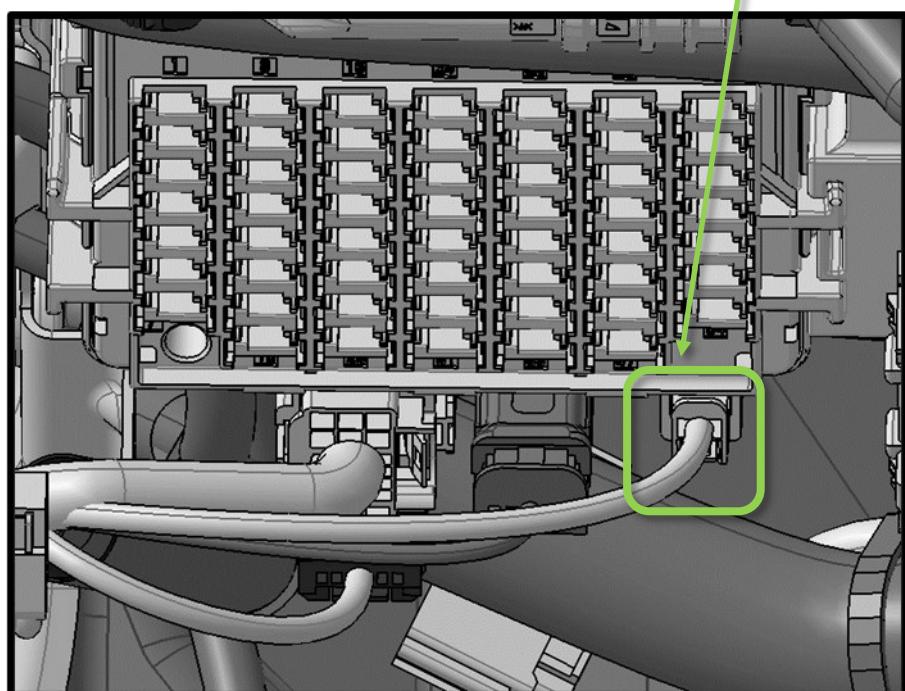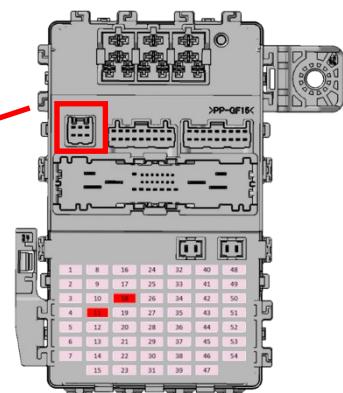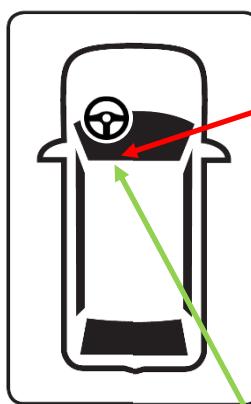
Viewpoint



**Assembly instructions:****(LHD)****Connection point location:**

2 pin wire to wire connector

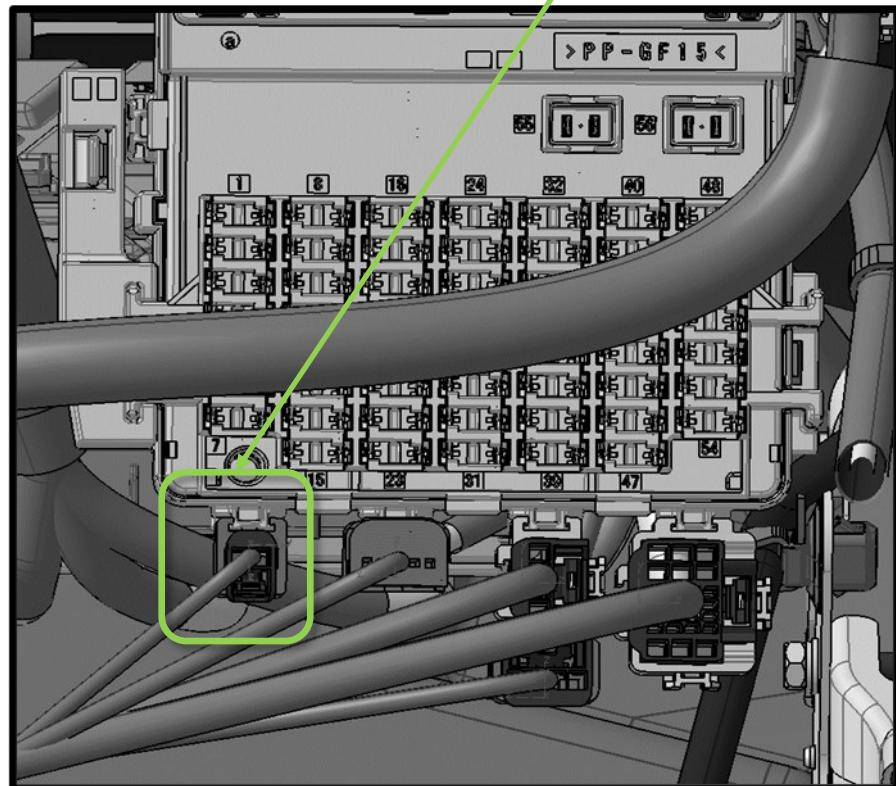Viewpoint



**Connection point:**

2 pin wire to wire connector.

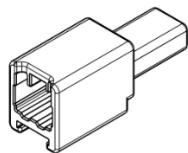
Disconnect the connector and make the connections between the male and female connectors with compatible connectors and terminals made by YAZAKI.

6 pin fuse box connection


Connect using a female 6 pin connector and terminals made by YAZAKI

Connector type: YAZAKI


7186-8845 (2 pin male)




7187-8845 (2 pin female)

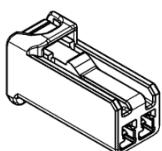

7187-8846 (6 pin female)

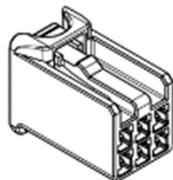**Male Terminals***

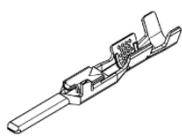
7114-7386-02 (S)



7114-7387-02 (M)

Female Terminals*

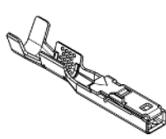7116-7389-02 (S)



7116-7390-02 (M)

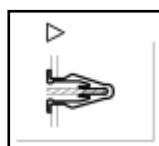
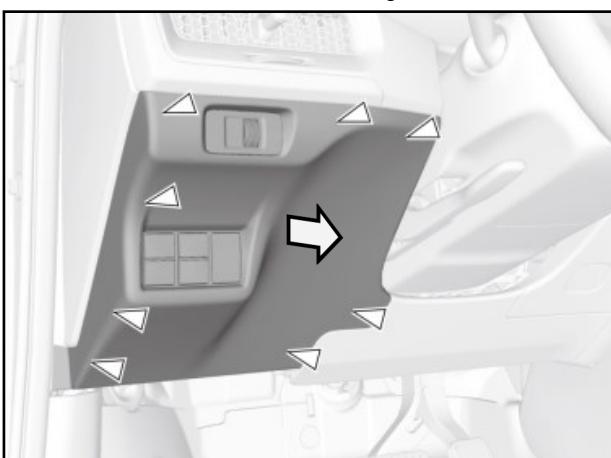
7114-7388-02 (L)

7116-7391-02 (L)

*Different sizes by wire gauge

Panel removal:

LHD shown, RHD is a mirror image.

**Modification of vehicle operation:**

None applicable.

Mounting position of alcohol interlock handset and alcohol interlock control unit:**Recommended installation position:**

Install in a position that does not interfere with driving operations or visibility.

Positions where it should not be installed:

Do not install in the airbag deployment area.

© Honda Motor Europe Ltd.	ID No.	Version No.	Page No.
	3GUAID_EN	001—Feb 2025	4 of 4