




Honda Super-N 5dr Hatchback (2026 -)

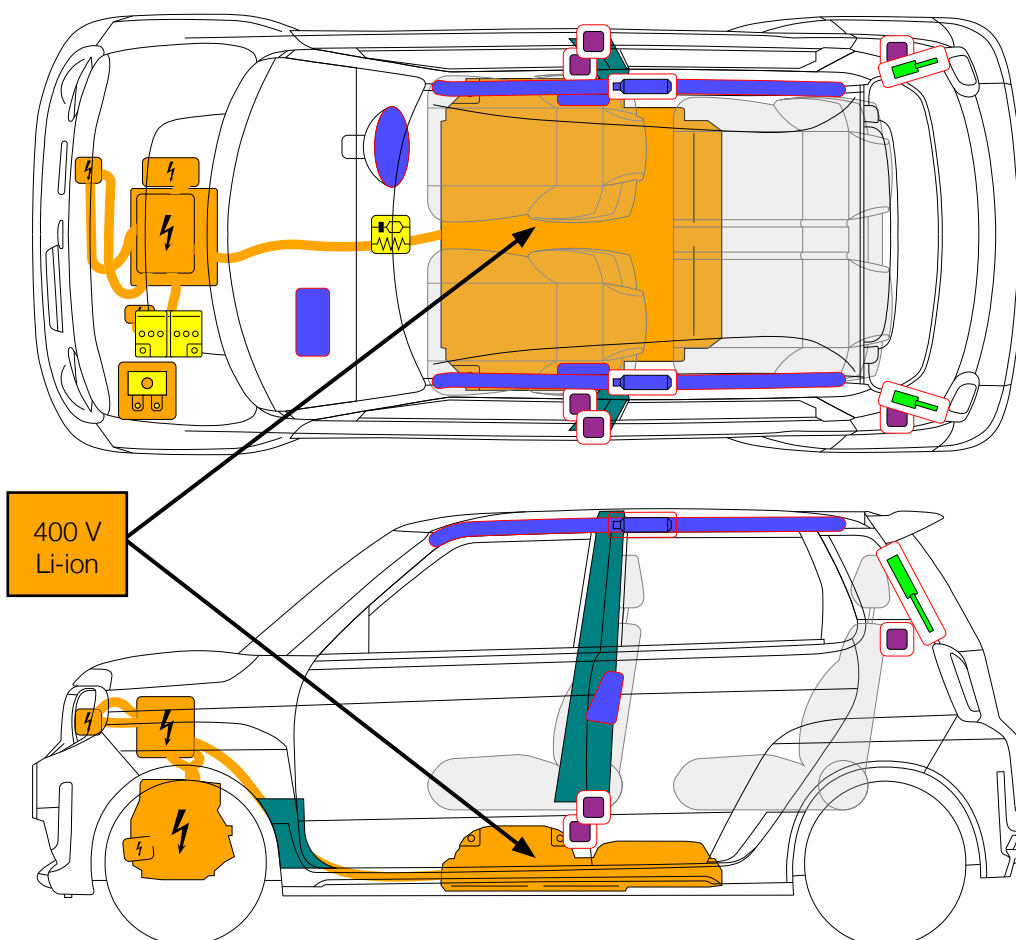

 Airbag	 Stored gas inflator	 Seat belt pretensioner	 Gas strut/preloaded spring	 SRS controlunit
 Battery low voltage	 Fuse box disabling high voltage	 Battery pack, high-voltage	 High voltage power cable	 High voltage component
 High strength zone				

1. Identification / recognition



LACK OF ENGINE NOISE DOES NOT MEAN VEHICLE IS OFF. SILENT MOVEMENT OR INSTANT RESTART CAPABILITY EXISTS UNTIL VEHICLE IS SHUT DOWN. WEAR APPROPRIATE PPE.

Brand logo



Brand logo



Charge port



2. Immobilization / stabilization / lifting

Immobilize vehicle:

1. Block wheels, apply brake and push the P (park) button to select the P (park) position
2. Set parking brake by pulling the parking brake switch (P)




Lifting points:



Appropriate lifting points



High voltage battery

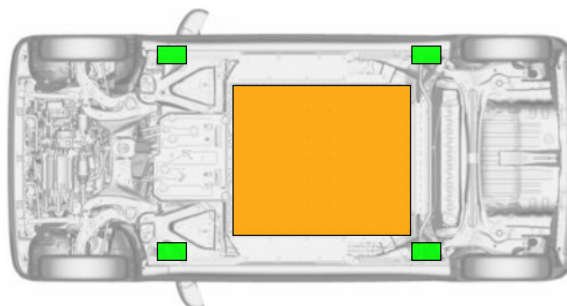

3. Disable direct hazards / Safety regulations



In case of a collision with seat belt pretensioner activation / airbag deployment, the high voltage system will be disabled automatically. The restraint systems are still active.

 
If the indicator is not illuminated, or if you cannot perform the operation in Main method, please perform the Alternative method 1 and 2.

Main method:

If the "Ready" indicator in the instrument cluster is illuminated press the Start/Stop button once. Then the high voltage system is disabled.





Then, remove the electronic key and keep at least 6 m (20 ft.) away from the vehicle




Alternative method:

1. Deactivation of high voltage system in engine compartment

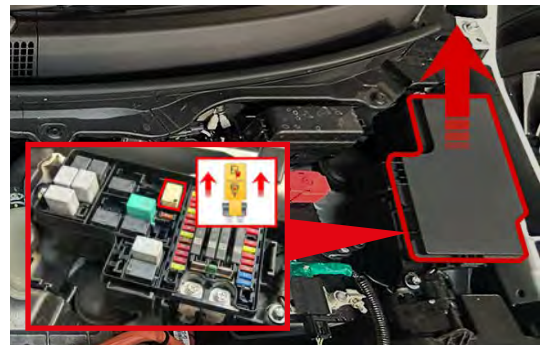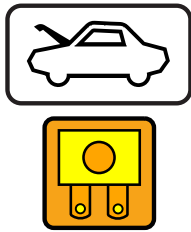

2. Disconnect 12 Volt battery

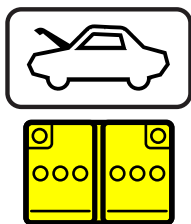

Safety instructions:


Never touch, cut, or open any orange high voltage power cable or high voltage component!

4. Access to the occupants

Seat adjustment



Steering column adjustment

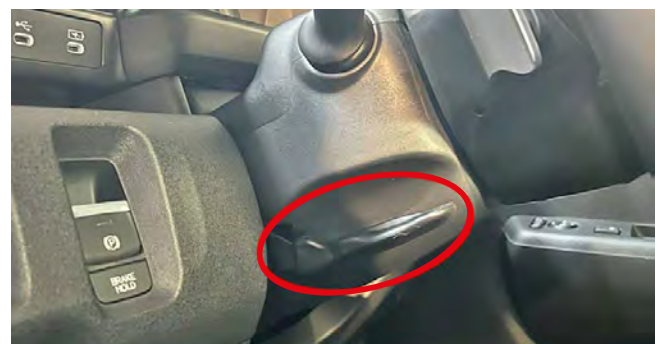


Glass types

A. Laminated glass

B. Tempered glass

 5. Stored energy / Liquids / Gases / Solids

	400 V	     
	12 V	 
	R-1234yf 295 - 345 g	   



When conventional coolant leaks (check reservoir) from the high voltage (HV) battery cooling system, HV-battery can become unstable with risk of thermal runaway. An increasing HV-battery temperature might be an indicator of thermal runaway.



6. In case of fire



USE LARGE AMOUNTS OF PURE WATER



POTENTIAL RISK OF HV-BATTERY FIRE RE-IGNITION / DELAYED FIRE!



Responders should always protect themselves with Personal Protective Equipment (PPE), including a Self-Contained Breathing Apparatus (SCBA), and take appropriate measures to protect civilians downwind from the incident.

7. In case of submersion

- There is no increased risk of electric shock in water resulting from the high voltage system
- If possible, remove the vehicle from the water and continue with the deactivation procedure for this vehicle (see chapter 3)

8. Towing / transportation / storage

Recovery hook storage



Location front hook




Location rear hook



8. Towing / transportation / storage

Towing

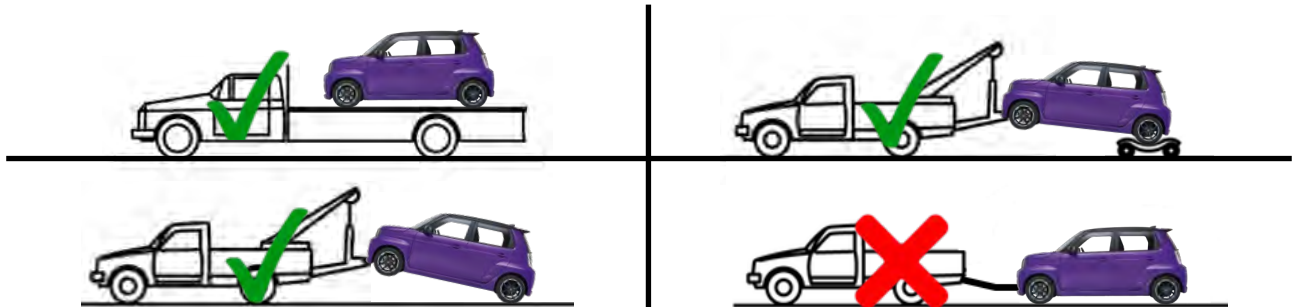

STORE VEHICLE IN AN OPEN-AIR PARKING AT A SAFE DISTANCE $\geq 5\text{M}$ FROM OTHER AROUND OBJECTS OR VEHICLES!

POTENTIAL RISK OF HV-BATTERY FIRE RE-IGNITION / DELAYED FIRE!



10. Explanation of pictograms used

	Remove smart key		Electric vehicle
	Warning high voltage		Flammable
	Caution		Hazardous to the human health
	Warning; low temperature		Acute toxicity
	Air-conditioning component		Explosive
	Use water to extinguish the fire		Corrosives
	Use thermal infrared camera		Bonnet